



## Adjusting trailer coupling

1. Lift the coupling lever up to allow access to the retaining pin.
2. Using a thin punch, push the retaining pin out of the activation arm. (Caution there is a small amount spring tension applied by the coupling).
3. Once the pin is out the coupling block can be removed.
4. Screw the threaded activation rod in to tighten the coupling tolerance, screw the rod out to loosen the coupling tolerance.
5. To rebuild - reverse the steps above.

Caution - make sure the retaining pin is centred when finished or it may catch.

