



Futura Trailers – Rock Guard Installation Procedure

The purpose of this procedure is to detail the process of installing a Rock Guard on a Futura Sport Range trailer.

Tools:

- 6mm Allen Key

Parts List:

- Rock Guard (RG195, RG200 or RG205)
- M10 X 21mm Flat Washers
- M10 Spring Washers
- M10 X 50mm Button Screws
- Loctite Threadlocker 222



Step1: Remove the grommets from the trailer chassis






Step 2: Take the 5 M10 X 50mm button screws and place an M10 spring washer first followed by an M10 X 21mm flat washer on each screw. Apply Loctite threadlocker 222 onto the tip of each screw.



Step 3: Place the Rock Guard into the mounting position at the front of the trailer chassis resting it on the drawbar

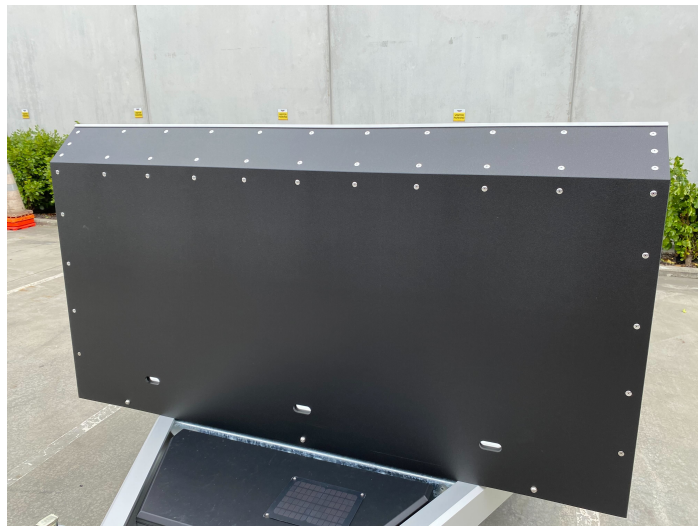

Step 4: Install the 2 side screws first (one on each side of the chassis) making sure they line up with the holes and rivnuts in the chassis. NOTE: You must ensure the holes line up as cross threading the screw in the rivnut mounted on the chassis can cause the rivnut to loosen from the chassis.



Step 5: Install the remaining 3 M10 X 50mm button screws into the 3 holes at the front of the trailer chassis.



Step 6: Check that the Rock Guard has been properly mounted and sitting correctly. Check that all screws have been properly tightened.

For any questions please do not hesitate to call or email Futura Customer Services

trailers@futuratrailers.com | 09-415-2563

futuratrailers.com