




## SETTING UP SMARTCONTROL VERSION 3.0


Firmware V2.2 Released 17 July 2023 PCB serial number: 10495+ (from trailer Vin 3807)  
The new lowering timer function allows the lowering timer to be set between 25 and 50 seconds  
Note: Default lowering timer = 37 seconds (default configuration on all new boards)

**The trailer must be on level ground with the tow hitch height set so the trailer is level.**

1. Fully raise the trailer (level on flat ground)

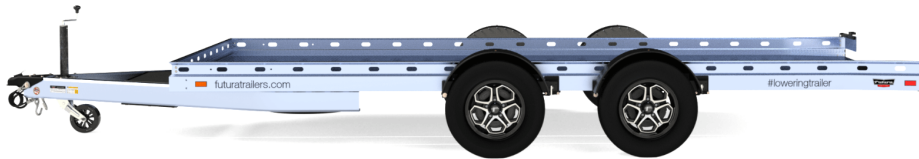

2. Switch the SmartControl power off

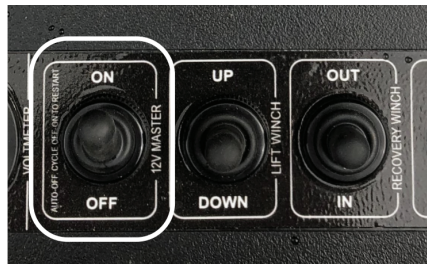

3. Hold the trailer-lowering switch on the SmartControl down  
(keep holding the switch down until the desired lowering time is reached - step 6).
4. Switch the SmartControl power switch on.
5. After 5 seconds, the deck will begin lowering and new beeps will be heard.
6. Release the deck lowering switch when the triple pulley block just touches the ground, before all load comes off the trailer winch rope.
7. Lower the trailer jack (jockey wheel) to the lowest position and lower the trailer to check that the back of the trailer touches the ground.

The controller will remember the lowering timer value when the switch is released and return to normal operation.

The process can be repeated to set a new time if desired, or if a mistake is made during the initial process.